


A Tough Flexible Protective Mesh

INSTALLATION GUIDELINES AND METHODS


LONGITUDINAL WRAPPING:

1. The Rockshield shall be unrolled along or beside the pipe which is to be protected.
2. The Rockshield shall be placed onto of the pipe so that the overlap shall be underneath the pipe.
3. The Rockshield shall be brought around the pipe so that the Rockshield overlaps onto itself by a minimum of 150mm in the circumferential direction.
4. The Rockshield shall be secured by plastic straps, heat bonding or similar method as agreed between the end user, contractor and the supplier.
5. The backfill process may begin after the Rockshield has been secured in position.

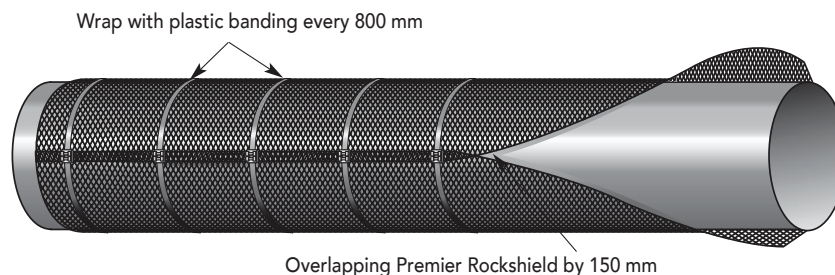


CIRCUMFERENTIAL WRAPPING:

1. The Rockshield shall be cut to lengths that will overlap onto themselves by a minimum of 150 mm when wrapped circumferentially around the pipe. These overlaps shall be positioned under the pipe and staggered as required.
2. Adjacent lengths of Rockshield shall overlap onto each other by a minimum of 100 mm.
3. The Rockshield shall be secured by plastic straps, heat bonding or similar method as agreed between the end user, contractor and the supplier.
4. The backfill process may begin after the Rockshield has been secured in position.

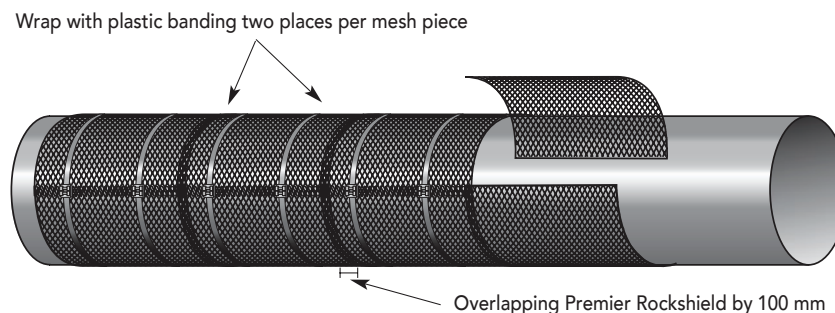


SPIRAL WRAPPING:

1. The Rockshield shall be spirally wrapped around the pipe with a minimum overlap of 100 mm. The start and end of the wrapping may use a circumferential wrap of Rockshield as required to provide complete coverage.
2. The Rockshield shall be secured by plastic straps, heat bonding or similar method as agreed between the end user, contractor and the supplier.
3. The backfill process may begin after the Rockshield has been secured in position.

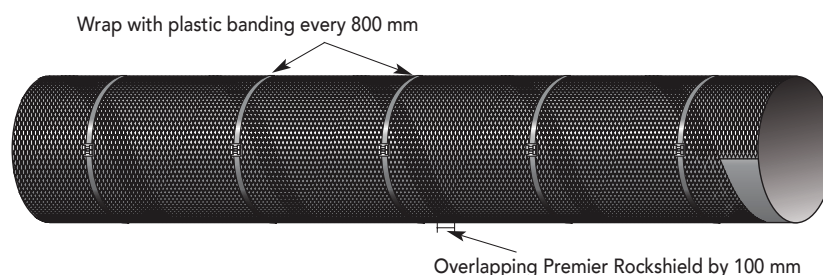

APPLICATION DIAGRAM

Section View

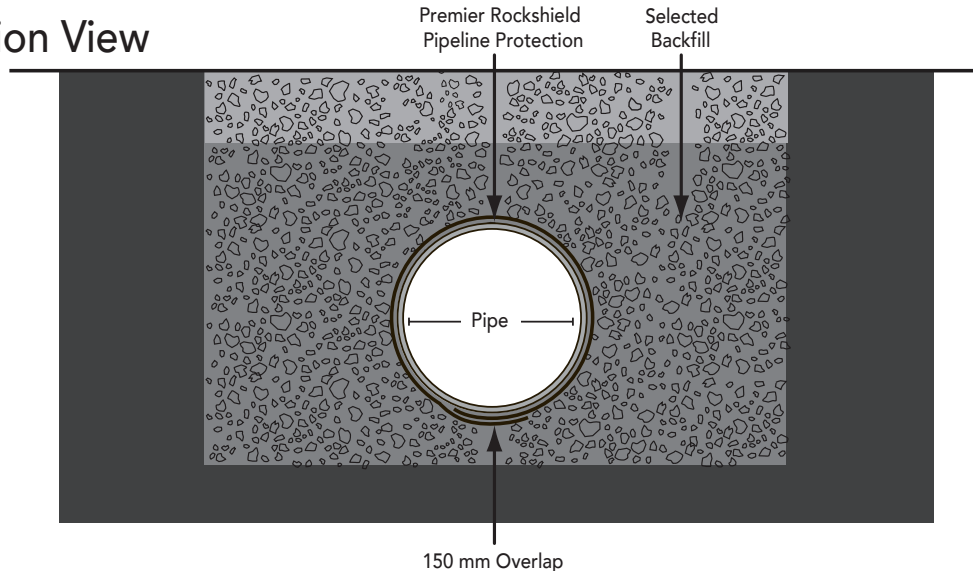

DISPOSAL

Please minimise or avoid waste wherever possible. Please do not discard waste material, including packaging, in the surrounding environment. Follow all relevant legislation for disposal.

Premier Coatings Ltd pursue a policy to develop and continually improve all of our products and therefore information given in these instructions for use is intended as a general guide and does not constitute a warranty, specification or risk assessment. Instructions for use are intended to provide sufficiently detailed information to achieve successful installation in normal circumstances. These guidelines may not cover all circumstances; however, our sales personnel are committed to assisting the user in establishing the suitability of the product for its intended purpose and additional specific information, advice and training (including Safety Data Sheets) is available. It is strongly recommended that installation is conducted with due regard to Health and Safety using a safe system of work, including risk assessments and method statements, in accordance with relevant local statutes and regulations. Equipment used for installation must be suitable for the intended use, maintained in a safe condition, inspected for signs of deterioration, and used by competent personnel. Any conflict between these guidelines and the specific project specifications must be resolved by the user before work commences. All rights reserved.

PREMIER COATINGS LTD

Headcorn Road, Smarden, Ashford, Kent TN27 8PJ, United Kingdom

TEL: +44 (0) 1233 770663 • EMAIL: enquiries@premiercoatings.com

WEB: www.premiercoatings.com

A MEMBER OF WINN & COALES INTERNATIONAL